


Safe Digging in Four Simple Steps

811 and ClickBeforeYouDig.com are free services designed to keep you safe when digging. Calling or clicking is always the safest option anytime you are moving dirt. Here's how it works:

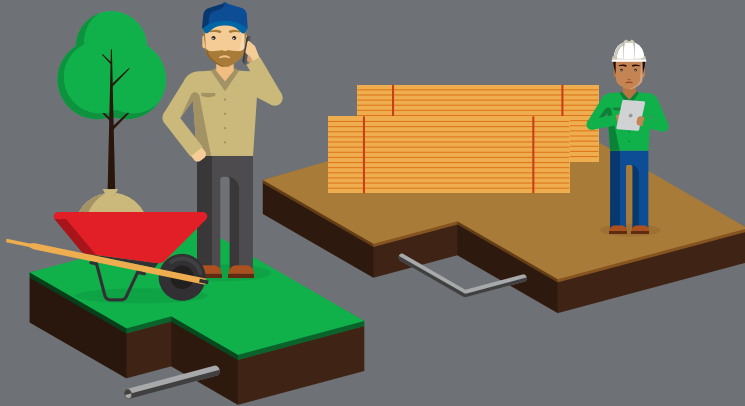

1

At least two to three business days before excavating (depending on state law) simply make a call to 811 or visit ClickBeforeYouDig.com.



2

When you call or click you'll be connected to your local 811 center, where you'll be asked to provide important details about your project, such as the type of work you'll be doing, where you'll be doing it and when your project will begin.



APWA Uniform Color Code

Proposed Excavation	Temporary Survey Markings	Electric Power Lines, Cables, Conduit and Lighting Cables	Gas, Oil, Steam, Petroleum or Gaseous Materials
Communication, Alarm or Signal Lines, Cables or Conduit	Potable Water	Reclaimed Water, Irrigation and Slurry Lines	Sewers and Drain Lines

3

The 811 center will provide this information to pipeline operators and other companies with buried utilities near your work site, saving you the time and trouble of contacting them individually.



4

Within two to three business days, professional locators will mark the underground utility lines near your work site so you can work around them, saving yourself from possible injury or property damage.

